

# How to remove a latch pin

## HOW TO REMOVE A LATCH PIN

1.- Locate the tip of a self tapping #4 X 5/8" point AB screw in **the center** of the latch pin to be removed.



2.- Hammer in the screw tip to start the screw digging into **the center** of latch pin.



3.- With the screw driver (tip #2 or smaller), applying pressure insert the screw into **the center** of the pin (4 to 5 full turns should be enough). If you go too far un-screw it enough to fit a pair of pliers between case and screw head.



4.- With a pair of pliers, pry **down** to move the screw **up** to start releasing the pin.



5.- With the pliers pull out the latch pin.

6.



7.

